

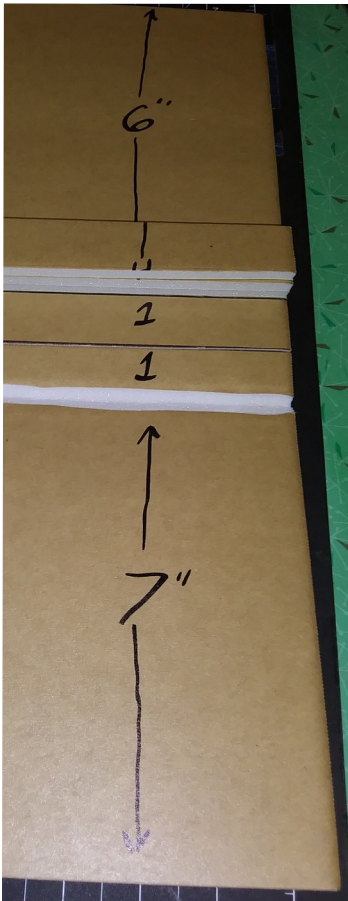
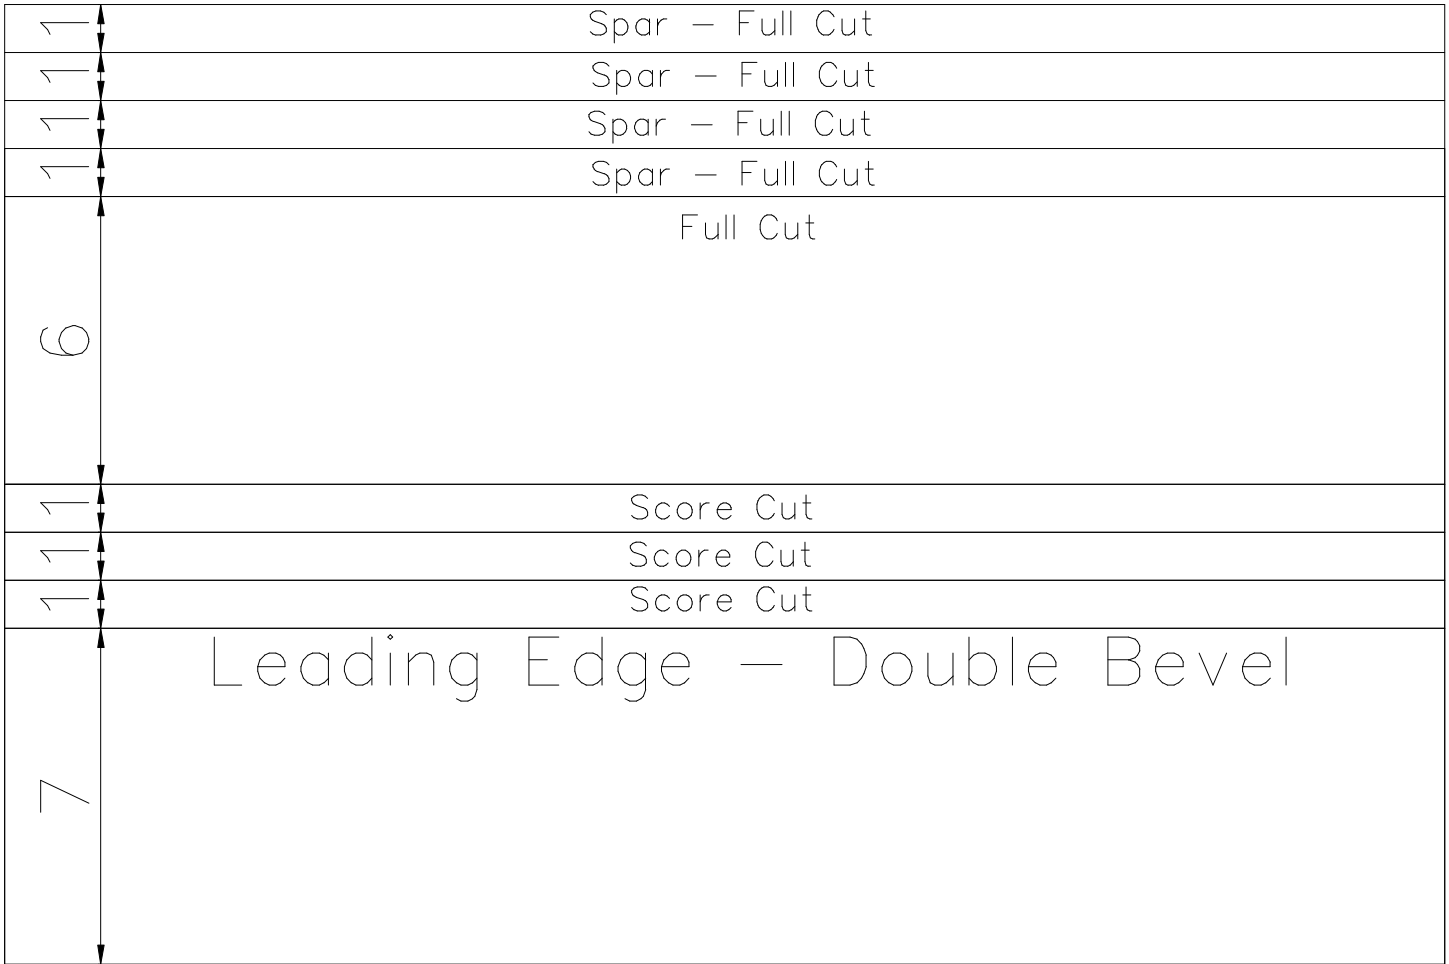


# HB1 Wing Plan

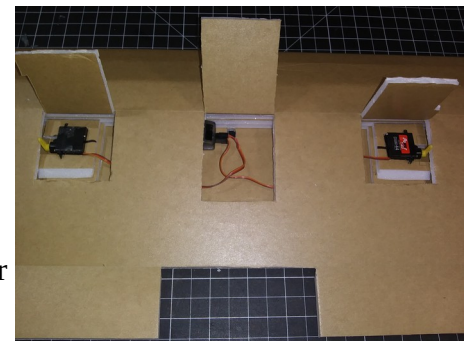

## Building steps:

1. Mark 30" x 20" sheet: 7", 1", 1", 1", 6", 4"
2. Cut off 4" spar section
3. Cut spar section into 1" strips
4. Stack and glue three 1" strips
5. Score cut all other marks
6. Fold open score cuts
7. Double bevel leading edge
8. Glue three layer spar stack to top skin (as shown)
9. Glue leading edge & fold over spar stack
10. Cut servo hatches and arm slots
11. Install servos
12. Fold top skin to trailing edge and glue
13. Score cut at TE
14. Single bevel cut at TE
15. Cut out 4 inch section from control surface center
16. Cut out receiver access hatch
17. Install push-rods and control horns
18. Trace cut and glue wing end caps from remaining 1" strip

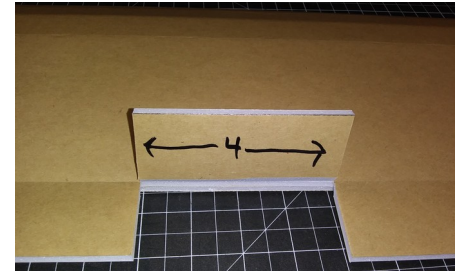

For more info and links:  
[FlyVAM.com/combat](http://FlyVAM.com/combat)

Heath.Bartel@gmail.com

